


To Customers Using a Machine Which Is the Property of DISCO

Display at the upper left of the machine screen

Normally the DISCO logo is displayed at the upper left of the screen.

If “Property of DISCO” is displayed there, it shows that the machine is the property of DISCO.

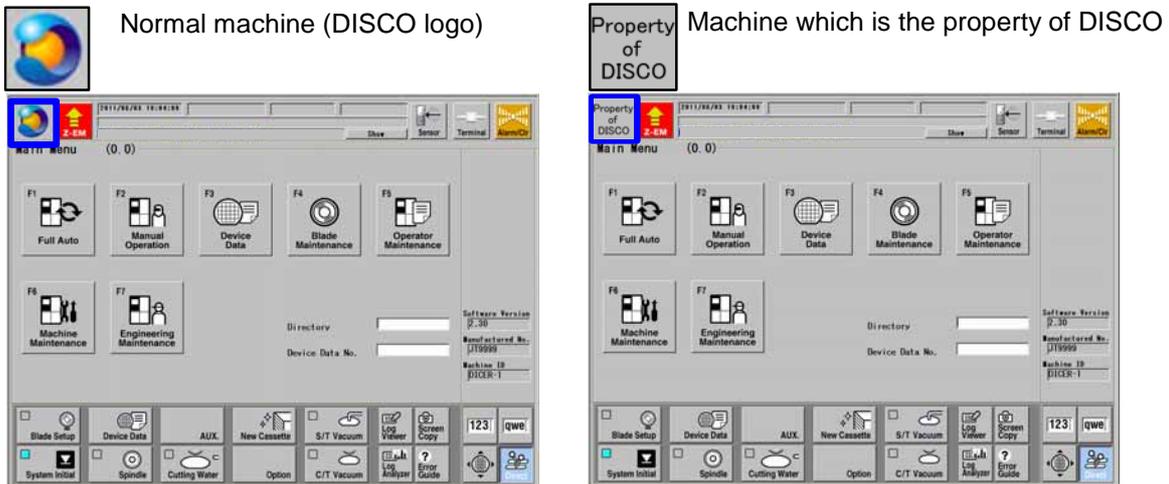


Screen lock function [for 3000, 6000 and 7000 series, DAD322 and DDS2300 only]

Normally, a DISCO machine is equipped with a function to lock the screen once the DISCO logo is pressed and disallow any screen operation to be performed without releasing the lock (screen lock function).

For machines that are the property of DISCO, the screen will be locked once “Property of DISCO” is pressed, in the same way as when the normal DISCO logo is pressed.

Customers using a machine which is the property of DISCO are requested to replace the procedure of “press the DISCO logo” described in the instruction manuals or other technical documents provided by DISCO, with that of “press <Property of DISCO>.”

<Property of DISCO> is displayed differently as shown below depending on the language.

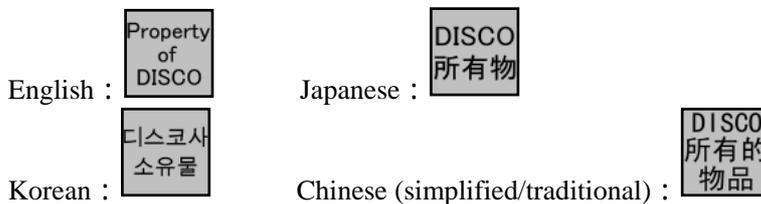

Inquiry

If you have any questions on this matter, please contact your nearest DISCO office or DISCO service office.