### **Technical Newsletter**

#tnl2016-0002e # 1 / 2

# Countermeasure Parts against the Problem that the Flowmeter Knob Comes Off

#### Procedure for installing the countermeasure part

We send you countermeasure parts against the problem that the flowmeter knob comes off which we reported in TNL2015-0018.

Please install the countermeasure parts in accordance with the procedure below.

DISCO's flowmeters are intended for adjusting the flow rate. They should not be used as a substitute for the facility-side water-stopping valve.

Step No.	Procedure
1	Check the type of the flowmeter.  • There are some types of flowmeters: one requiring the operation described in this document and the others not requiring it.
	The flowmeter requiring installation of the countermeasure part:  According to the procedure in Step 2 and subsequent steps, install the countermeasure part.
	The flowmeters not requiring installation of the countermeasure part: The procedures in Step 2 and subsequent steps are unnecessary.
2	Check to make sure that the fastener is located inside the acrylic section.
	• If the fastener is protruded from the acrylic section:  The flowmeter needs to be replaced.  According to the Maintenance Manual, replace the flowmeter.

## **Technical Newsletter**

#tnl2016-0002e # 2 / 2

Procedure for installing the countermeasure part (Continued)

Step No.	Procedure
3	Fit the countermeasure part (retrofit stop ring) onto the screw section.  Retrofit stop ring
4	Twist the tip of the retrofit stop ring to remove the part other than the ring.  Twist and remove this part.  Ring  After installing the retrofit stop ring
5	Adjust the flow rate if necessary.

#### Inquiries

Please contact your local DISCO sales representative or customer engineer if you have any questions regarding this matter.